




Tutorial – Safari Chef 2 Leg replacement


Step 1,

Remove the two
Fixing screws and
retaining clamps to
each side.

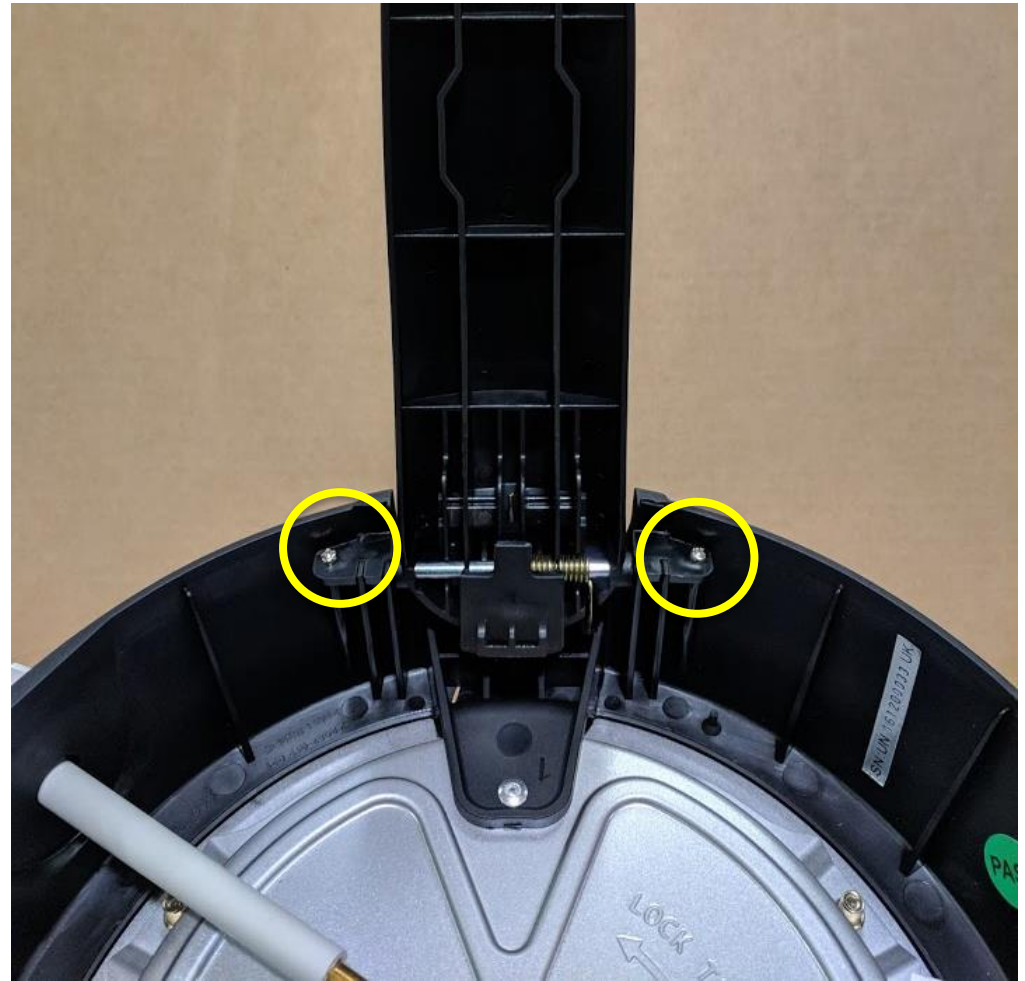


Step 2,

Detach the leg by
sliding it upwards. Be
careful of the spring.

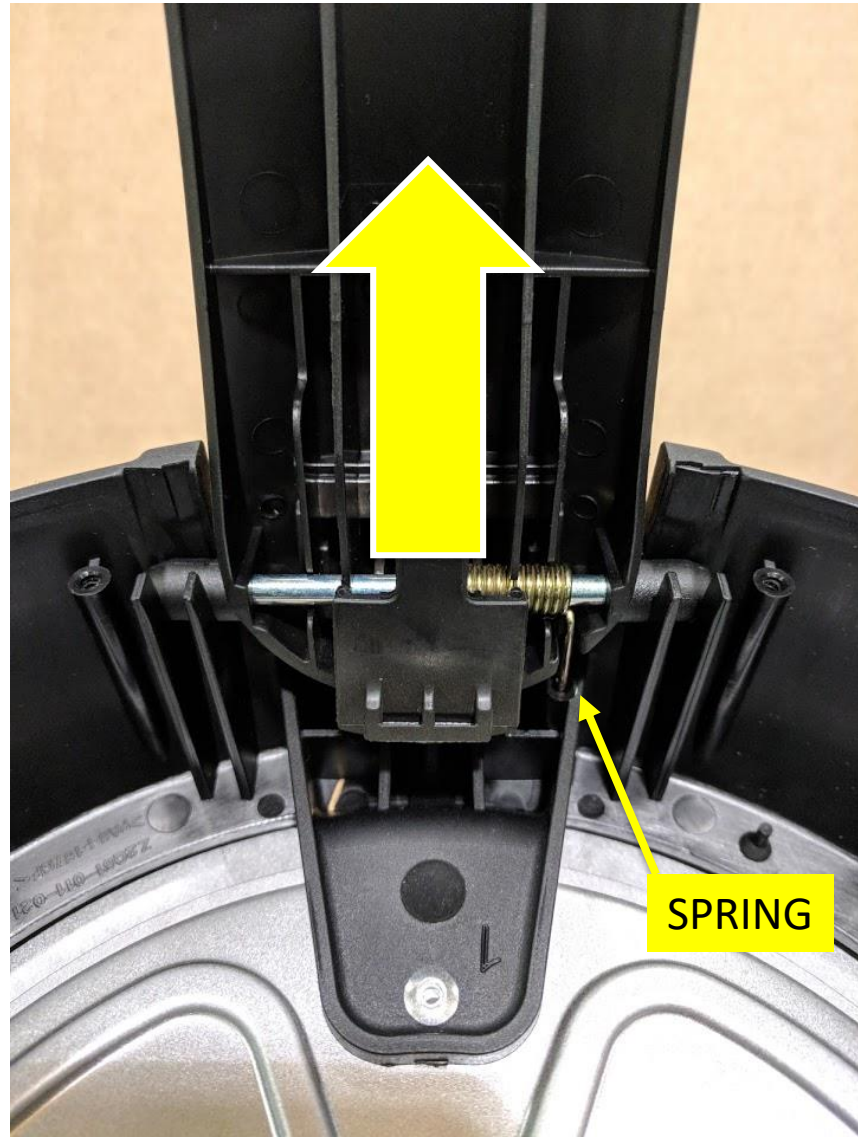

Step 3,

Attach new leg by sliding down into place and at the same time engage the spring into the hole.

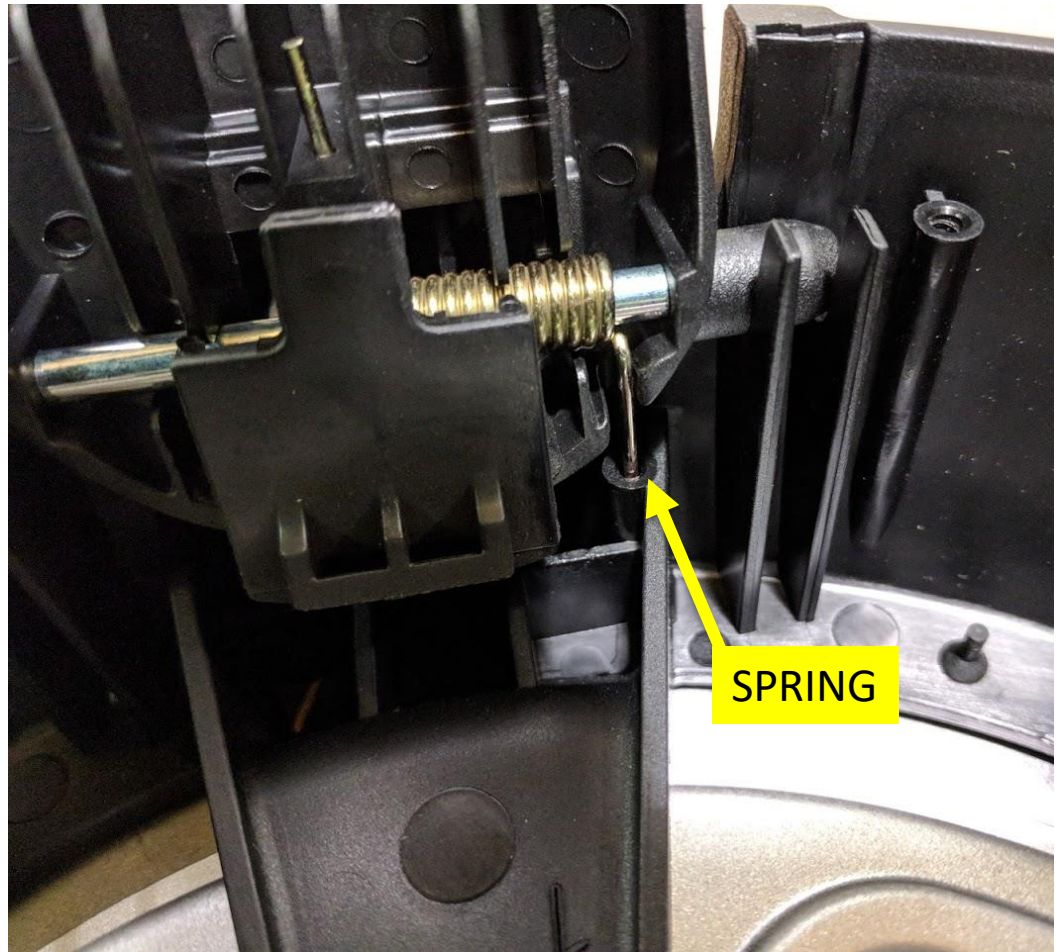

Step 4,

Refit the plastic
retainers and screws.

Finished.

